





# Heat Sensitive Indicator

The heat indicator is located next to the roll stamp on the inside and on the tire side drop well.

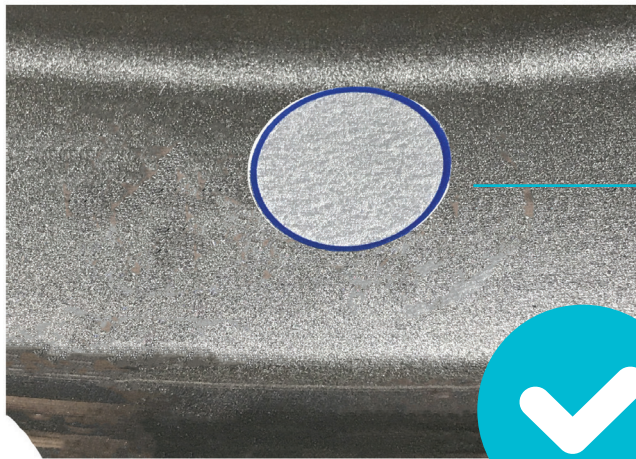

## Clear Heat Indicator

The wheel can stay in service.

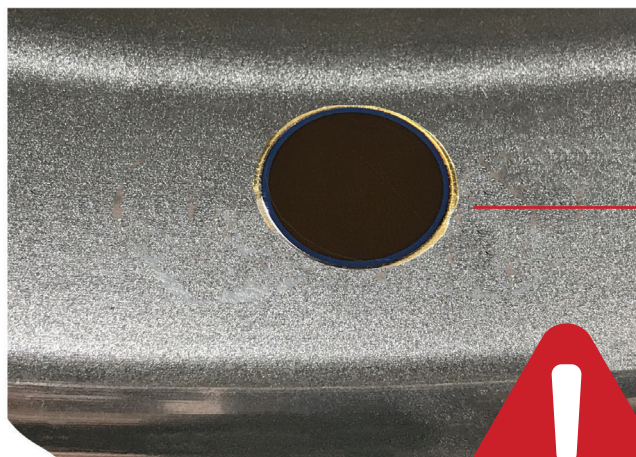

## Charred Heat Indicator

Exposed to excessive heat.  
Remove from service.



Howmet Wheel Systems Australia

18 Law Court, Sunshine West, VIC 3020 | 1800 955 191 | [www.alcoawheels.com.au](http://www.alcoawheels.com.au)



[alcoa\\_wheels\\_Australia](#)



[alcoawheelsAustralia](#)