





Heat Sensitive Indicator

The heat indicator is located next to the roll stamp on the inside and on the tire side drop well.

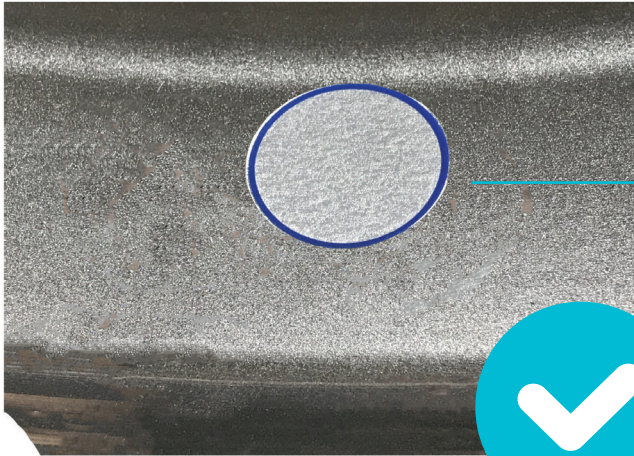

Clear Heat Indicator

The wheel can stay in service.

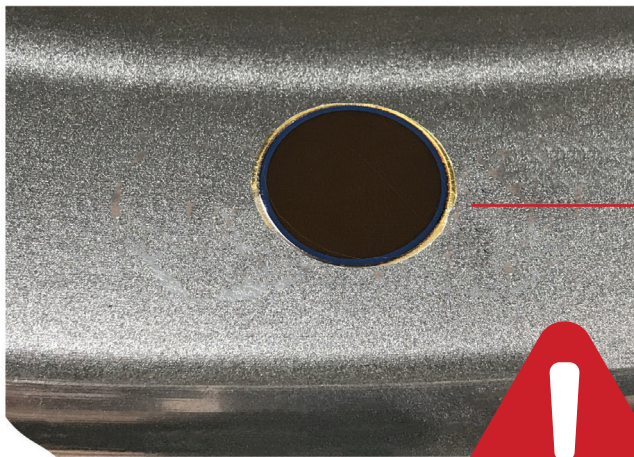

Charred Heat Indicator

Exposed to excessive heat.
Remove from service.



1616 Harvard Ave. Cleveland, OH 44105

| 1-800-242-9898

| www.alcoawheels.com

[facebook.com/alcoawheels](https://www.facebook.com/alcoawheels)

[youtube.com/AlcoaWheelsNorthAmerica](https://www.youtube.com/AlcoaWheelsNorthAmerica)

[alcoawheels](https://www.instagram.com/alcoawheels)

[Listen to Our Podcast](#)
Behind the Wheels

[@alcoawheels](https://twitter.com/alcoawheels)

© 2020 Howmet Aerospace Inc. The Alcoa trademarks are owned by Alcoa USA Corporation and used by Howmet Aerospace Inc. and its subsidiaries under license from Alcoa USA Corporation.